
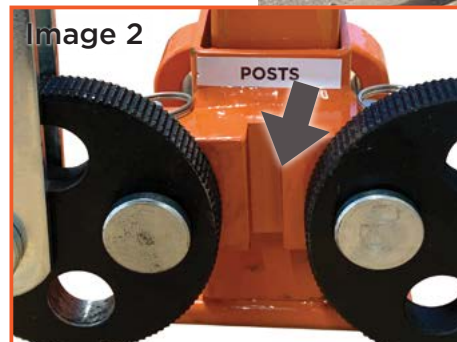


Removing Pickets & Posts

1. Make sure all nails, screws, wire and fittings are removed from pickets or posts before using the PostJak.
2. Lift the handle of the PostJaK until the jaws are fully open.
3. Position the PostJak so that the picket/post is located both in the top groove (Image 1) and in the lower groove (Image 2), between the jaws.
4. Push down on the handle, the jaws will lock onto the picket/post and begin to lift it out of the ground.
5. Repeat this action as necessary until the picket/post is fully removed.

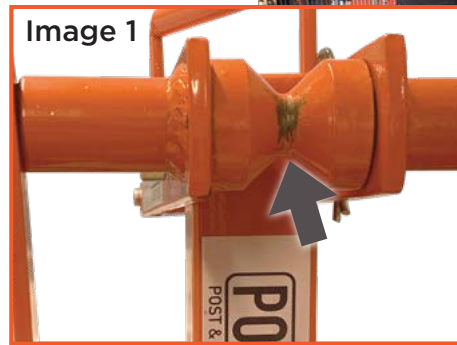

Swapping PostJak head piece to suit Pickets or Posts

The unique head piece design allows the PostJak be used to remove both star pickets and posts up to 25mm wide. This can be done by rotating the head piece.

To rotate the head piece:

1. Remove the quick release pins on top of the head piece, behind the jaws - see Image 3.
2. Remove the large silver pins that mount the jaws to the head piece - see Image 3.
3. With the head section now free, the top pivot pin can now be removed - see Image 4
4. Slide the head piece up and off the main shaft and turn it 180° - Pickets or Posts.
5. Remember to replace the top pivot pin.
6. Insert the silver pins that mount through the jaws and lock into place with the quick release pins.
7. The PostJak is now ready for use.

